

Remote shell replacement instructions

Tools required:

- Cleaning cloth/wipe
- small brush
- Methylated spirits or similar cleaning alcohol
- Small screwdriver set
- 1. Apply a small amount of methylated spirits to your cleaning cloth and clean any dirt or dust on remote.
- 2. Remove any retaining screw(s) usually on the back of the remote shell using a screwdriver.
- 3. Look for any notch or cut out in the housing and using a small flat screwdriver gently pry the shell open.
- 4. Gently lift the circuit board out of the shell noting how it was located.
- 5. Using a small brush remove any dust on the circuit board, also replace the battery if necessary.
- 6. Take your new map shell and fit buttons to shell, where applicable.
- 7. Refit the circuit board to the new shell paying attention to how it is located.
- 8. Clip the two parts of the shell together and refit any retaining screws.
- 9. Test the remote buttons paying attention to any led lights that may illuminate indicating the remote is functional. Depress the remote next to the vehicle and confirm remote locks/unlocks doors/boot.



WARNING! Once assembled this product will contain a button/coin cell battery. It is a lithium button/coin cell battery. If swallowed or placed inside any part of the body, a lithium battery can cause severe or fatal injuries within 2 hours or less. The battery is hazardous and should be kept out of reach of children at all times whether new or used. If you think batteries may have been swallowed or placed inside any part of the body, seek medical attention immediately or contact the Australian Poisons Information Centre on 13 11 26 or the New Zealand National Poisons Centre on 0800 764 766.